

# Änderung der DHCP-Einstellungen für Modell: DIR - 600 (Hersteller: D-Link)

1. Verbindung mit dem Router herstellen (über W-LAN oder LAN)

2. Geben Sie in einem beliebigen Browser folgendes ein:

 <http://dlinkrouter>

3. Anschließend gelangen Sie auf die Herstellerseite von D-Link und Sie können sich Anmelden

Login mit folgenden Daten (sofern Sie diese nicht geändert haben):

User Name: **admin**  
Kennwort: **[leer]**



Product Page : DIR-600 Hardware Version : Bx Firmware Version : 2.15

**D-Link**

**LOGIN**


Login to the router :

User Name :   
Password :

**WIRELESS**

Copyright © 2008-2011 D-Link Systems, Inc.

4. Einstellungen ändern

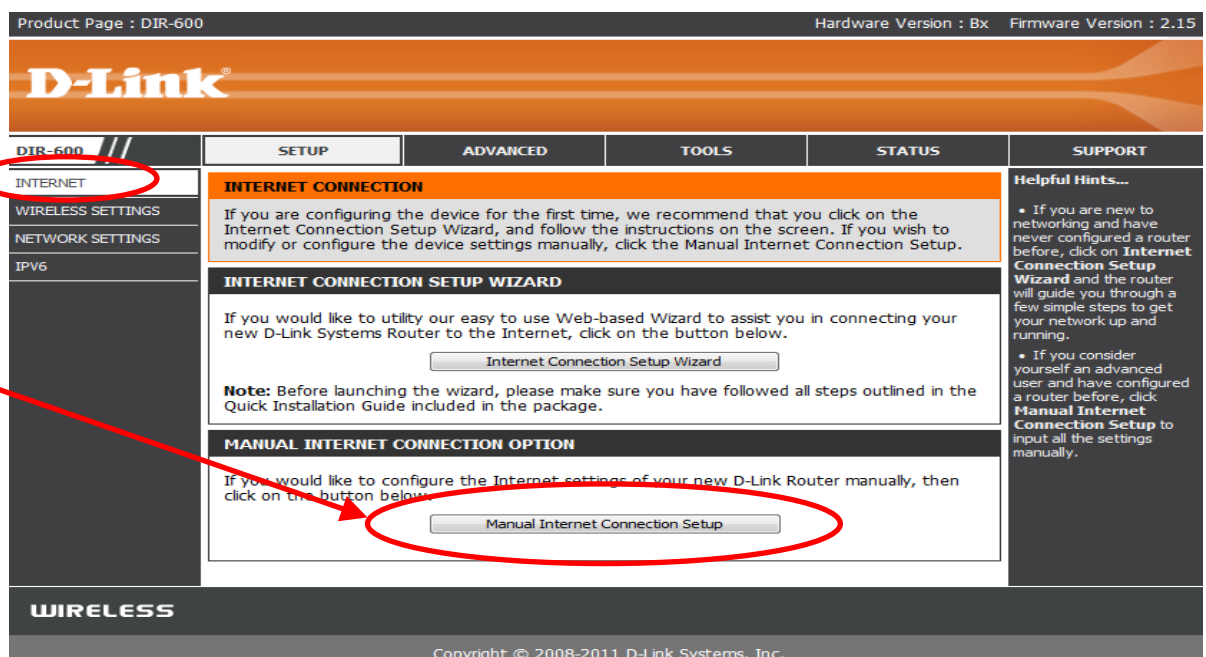

Product Page : DIR-600 Hardware Version : Bx Firmware Version : 2.15

**D-Link**

DIR-600 //

INTERNET WIRELESS SETTINGS NETWORK SETTINGS IPV6

**INTERNET CONNECTION**

If you are configuring the device for the first time, we recommend that you click on the Internet Connection Setup Wizard, and follow the instructions on the screen. If you wish to modify or configure the device settings manually, click the Manual Internet Connection Setup.

**INTERNET CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your new D-Link Systems Router to the Internet, click on the button below.

**Note:** Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**MANUAL INTERNET CONNECTION OPTION**

If you would like to configure the Internet settings of your new D-Link Router manually, then click on the button below.

**Helpful Hints...**

- If you are new to networking and have never configured a router before, click on **Internet Connection Setup Wizard** and the router will guide you through a few simple steps to get your network up and running.
- If you consider yourself an advanced user and have configured a router before, click **Manual Internet Connection Setup** to input all the settings manually.

**WIRELESS**

Copyright © 2008-2011 D-Link Systems, Inc.

Menüpunkt „Internet“ und „Manual Setup“ öffnen.



- INTERNET
- WIRELESS SETTINGS
- NETWORK SETTINGS
- IPv6

### WAN

Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP, and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider.

**Note :** If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

### ACCESS POINT MODE

Use this to disable NAT on the router and turn it into an Access Point.

Enabled Access Point Mode

### INTERNET CONNECTION TYPE

Choose the mode to be used by the router to connect to the Internet.

My Internet Connection is : Dynamic IP (DHCP)

- Static IP
- Dynamic IP (DHCP)
- PPPoE (Username / Password)
- PPTP (Username / Password)
- L2TP (Username / Password)
- Russia PPTP (Dual Access)
- Russia PPPoE (Dual Access)
- DS-Lite

### DYNAMIC IP (DHCP) INTERNET

Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address.

Host Name :

Primary DNS Server :

Secondary DNS Server :  (optional)

MTU :

MAC Address :

### Helpful Hints...

- Internet Connection:** When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, please contact your Internet Service Provider (ISP).
- Support:** If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed.

„My Internet Connection is“ in Dynamic IP (DHCP) ändern!

Sichern und Speichern.

### WIRELESS